



1200 Watt Desktop Heater

Instruction Manual

Instant heat desktop heater with PTC ceramic rapid heat technology in a compact size for a convenience, energy-efficient and effortless home or office use.



V1.0 EN

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

WARNING

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia, including the following:

1. Read all instructions before using this heater.
2. Keep out of children's reach!
3. Always unplug the heater when not in use.
4. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
5. Always use the heater on a dry, even , flat, and stable leveled surface.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate this heater where it may fall into a bathtub or other water containers.

8. The heater must not be located immediately below a socket-outlet. Do not use this heater in the immediate surroundings of a bath, a shower, or a swimming pool.
9. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
10. Always plug heaters directly into the wall outlet/receptacle. Never use it with an extension cord or power strip.
11. To disconnect the heater, turn controls off, then remove the plug from the outlet.
12. When unplugging, be sure to pull by the plug and not the cord.
13. Do not operate the heater with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
14. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from the traffic area and only place where it will not be tripped over.
15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may

cause an electric shock or fire, or damage the heater.


16. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use it on soft surfaces, like a bed, where openings may become blocked.
17. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
18. Use the heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to people.
19. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
20. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

SAVE THESE INSTRUCTIONS



WARNING:

In order to avoid overheating, DO NOT cover the heater.

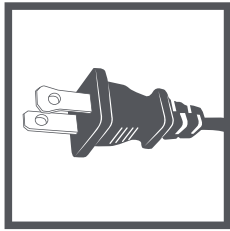

THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.

NOTE & CAUTION

Please read the entire warning and safety instruction before use

In order to avoid hazard due to inadvertent resetting of the thermal cut off, this device must not be powered through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Tip-Over Safety Switch:

The heater is equipped with a tip-over safety switch to prevent fire in even of a tip over. The safety switch will automatically shut down the device if the device is tip over or lifted off the ground. To reset the tip over switch, inspect and place the device on a flat and even surface/ground and turn the device on again.

Thermal Protection Safety System:

This device is equipped with an internal safety system against thermal malfunction – the internal thermal fuse is set to shut down the device if abnormal temperature is detected around 162F/72C degree to prevent fire. The internal fuse is not user-serviceable – please contact our customer service team for further instruction.

REMOTE CONTROL DISCLAIMER

⚠ WARNING <small>INGESTION HAZARD: This product contains a button cell or coin battery.</small>	
⚠ WARNING	
<ul style="list-style-type: none">• INGESTION HAZARD: This product contains a button cell or coin battery.• DEATH or serious injury can occur if ingested.• A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.• KEEP new and used batteries OUT OF REACH of CHILDREN• Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	
⚠ WARNING	
<ul style="list-style-type: none">• INGESTION HAZARD: This product contains a button cell or coin battery.• DEATH or serious injury can occur if ingested.• A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours• KEEP new and used batteries OUT OF REACH of CHILDREN• Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

- A. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- B. Even used batteries may cause severe injury or death.
- C. Call a local poison control center for treatment information.
- D. The battery type is CR2032
- E. The battery voltage is 3V.
- F. Non-rechargeable batteries are not to be recharged.
- G. Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
Ensure the batteries are installed correctly according to polarity (+ and -).
Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

CARE AND MAINTENANCE:

To keep the device in tip-top performance – clean the inlet filter once every 3 months. To clean the inlet air filter – make sure the device is unplugged and cold to touch.

1. Pull the filter mesh out.
2. Clear the filter mesh with lukewarm water.
3. Air dry only – do not use heat/compress air to dry.
4. Reinstall the filter

CAUTION:

Make sure the device is unplugged and cool down complete before cleaning. Allow plenty of time for the filter to dry before reinstalling back to the device. Do not use without the filter or use other filter.

Product Specifications

Rated Frequency: 60Hz
Rated Voltage: 120V
Rated Power: 1200W
Product Size: Est. 6.3x4.45x5.35 inches 160x113x136 mm
Product Weight: Est. 24.7oz / 0.7KG

PRODUCT OVERVIEW



- 1 Hot air outlet
- 2 Ceramic heating element
- 3 Power indicator light
- 4 Remote control sensor
- 5 Tip-over safety switch



- 6 Magnetically attached remote control *Optional equipment shown
- 7 Removable inlet filter
- 8 Power ON/OFF
- 9 Power cord

HOW TO USE (For Model equipped with remote control)

1. Place the heater on a dry, level and even surface.
2. Plug in the power cord in the power outlet.
3. Turn on the master power switch in the back of the heater, the working indicator light will breathe slowly in red to indicate the heater is now in stand-by mode.

4. Point the remote control toward the front of the heater, press the remote control ON/OFF button once to turn on the heater. The working indicator will turn solid red to indicate the heater is operational.

5. Press the remote control ON/OFF button again to put the heater into stand-by mode and the indicator light will stay breathing. The cool down fan will run and slow down gradually for 30 seconds.

6. To turn off the heater completely, switch off the master switch in the back of the heater, the fan may still be running to cool down the heater, please wait till the fan is off before switching it off and unplugging the power cord.

Remote Control:

1. An optional IR remote controller can be attached via a magnetic position detent as shown here.



2. To use the remote control feature, the heater must be plugged in and with the power switch to "ON" position.

3. Pull the clear battery insulation strap out to use the remote.

4. Point the remote IR sensor toward the heater's IR sensor and press the on/off button to turn the heater on and off. The working length of the remote is within 2 meter/6 feet.

5. To change the remote's battery use a cross head + screw driver to remove the safety screw. Press down on the spring loaded latch and pull the battery cover off.

6. Replace the old battery with a fresh CR2032 lithium 3.0V battery (with the right polarity marked on the battery casing.

7. Install the battery cover and tighten the safety screw with a cross-head screwdriver.

CAUTION:

1. This heater is not equipped with a device to control the room temperature. Do not use this heater in a small rooms when it is occupied by people not capable of leaving the room on their own, unless constant supervision is provided.
2. Turn the main power switch off at the back of the heater to completely switch off the heater. Let the heater fully cool down before handling and unplugging the power cord from the power supply.
3. Never unplug the heater before the heater is turned off.
4. Dispose the used battery in accordance with local regulation. Do not charge or dispose the battery in fire.

Scan the QR code below for tutorial videos:



Have a technical or customer service related question?

We are here to help, please contact our customer service team via the URL below:



★ **This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when it is occupied by people not capable of leaving the room on their own, unless constant supervision is provided.**

★ **Turn the main power switch off at the back of the heater to completely switch off the heater. Let the heater fully cool down before unplugging the power cord from the power supply.**

★ **If the heater has been cleaned, wait until it's completely dry before use.**



FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocated the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.