 




GrillMaster


Electric Brush

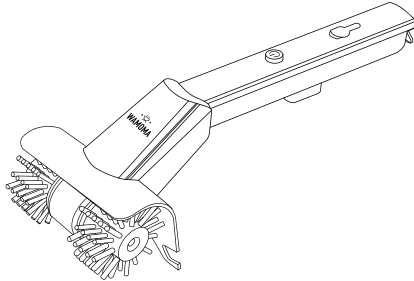

Instruction Manual

Please read all the instructions before use.

Product List

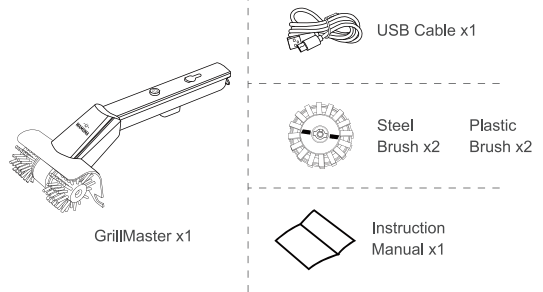


Warning!

- Inspect the brush before each use. For best cleaning performance, replace the brush head if the bristles become loose, damaged, missing, or excessively worn.
 - Ensure the power cord and plug are completely dry before charging.
 - This device contains sharp edges. Handle with care and store it in a safe place out of reach of children.
- For best performance and safety, use the device only when the grill surface temperature is below 248°F (120°C).
 - To maintain product performance, clean the device with a damp cloth. This device is not designed for immersion in water.
 - Always switch off the device before installing or removing the brush head.
 - For optimal battery performance, fully charge the device before first use after extended storage. If stored for long periods, recharge the battery every six months.
 - Follow all operating instructions to help ensure reliable performance and extend the life of the product.
 - Please dispose of batteries responsibly in accordance with local regulations. Always power off the device before removing the battery pack.

Product Overview

- Start Switch:** Press the switch for 1 second to start the motor; Short press to switch between Gear 1 and Gear 2; Press the switch again for 1 second to turn off.
- LED Light:** The light will be turned on automatically during operation, observing the cleaning area clearly.
- Water Filling Inlet:** Open the water filling inlet & add clean water.
- Spray Water Switch:** Push button with spraying mist instantly.
- Brush Head:** Rotates immediately when turned on.
- Built-in Scraper:** It can prevent dirt from splashing and as a grill lifting tool.

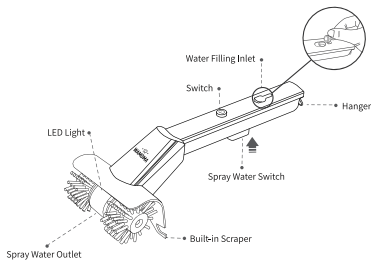

Charging & Battery Status

Charging: Red indicator light flashes
Fully charged: Green indicator light remains on

A flashing red light indicates that the battery level is below 20%. For optimal performance, please recharge the device as soon as possible.

To help protect the motor, the device is equipped with over-current protection. If excessive force or resistance is encountered during operation, the device may automatically stop. Simply press the power button to restart and continue use.

Use Instruction

Note: Please read this manual carefully before using the grill brush.


- Open the water filling inlet, add clean water (corrosive solutions are not recommended), close the water tank cap tightly to make sure seal well.
- Make sure the brushes are firmly installed before starting.
- Press the switch for 1 second to start the grill cleaning brush.
- Clean the grill by moving brush back and forward.
- Built-in metal scraper for cleaning the toughest debris even under the grates.
- Press the switch for 1 second to turn off the grill cleaning brush.
- Clean the brush & body after use, store in a cool place.

Maintenance

Cleaning the Brush Head


- Rotate the brush head until the arrow on the outer face aligns with the two tabs on the quick connector.
- Gently pull the brush head away from the device to remove it.
- Rinse the brush head thoroughly under warm running water. For stubborn grease or residue, use a small amount of mild dish soap and a soft brush or sponge.
- Rinse thoroughly to remove any soap residue.
- Allow the brush head to air dry completely before reinstallation.
- Once dry, align the brush head with the connector and rotate it until it locks securely into place.

Note: Don't put the bristle brush head into dish washer.

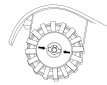

Disassemble brush head

Rotate the brush head, pull it out when aligning the arrow on the outer end face of the brush head with the two protrusions of the quick connector inside.

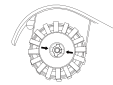

Assemble brush head

Align the arrow at the end of the brush head with the two protrusions of the quick connector and rotate to lock it when it is dry.

Handle Clean:

- Wipe the handle with a soft, slightly damp cloth after use.
- For tougher grease or dirt, use a cloth lightly dampened with water and mild soap.
- Dry the handle thoroughly after cleaning.

Note: To maintain optimal performance and protect the internal components, do not rinse, immerse, or soak the handle in water.

Product Specification

Battery Type: 18650 Rechargeable Lithium battery

Name	GrillMaster Electric Brush	WYL-551 Input:	5 V / DC 2 A
Item No:	SKU 1164	Rated Power:	11 W
Product Size	16.14 x 4.17 x 4.72 in. 41 x 10.6 x 12 cm	Waterproof:	IPX5
Box Size	5.43 x 5.12 x 14.57 in 13.8 x 13 x 37 cm	Battery:	Li-Ion 7.4 V 2600 mAh
Cable	USB-A to USB-C	Use Time:	80 min

Made in China

