

WOODRANGER
POWER LEAF BLOWER

Wood Ranger Power Leaf Blower Guide

Please read this instruction manual carefully before use,
and use it properly and safely.



PRODUCT OVERVIEW

Thank you for choosing the Wood Ranger Power Leaf Blower. This product uses advanced motor technology for strong, stable airflow in a lightweight, cordless design. The powerful, quiet operation is suited for all your indoor and outdoor clean-up needs.



WHAT'S INCLUDED

24v 1x BATTERY	CHARGER	USER MANUAL	BLOWER BODY
----------------	---------	-------------	-------------

PRODUCT SPECIFICATIONS

Output Power	550W
Battery Voltage	24 Volt
Speed (Max)	55000 rpm
Use Time	3 - 4 Hours
Charging Time	4 hours

PREPARATION BEFORE USE

- **Check Parts:** Confirm all parts are included and undamaged.
- **Charge Battery:** Use the charger to fully charge the battery (about 4 hours).
- **Insert Battery:** Install the battery correctly following compartment instructions.



OPERATION GUIDE



Power On

Install the battery, then press the speed button to start the blower.



Adjust Speed

Use the Dynamic Speed Trigger to adjust power — light pressure for low speed, firm pressure for maximum.



Usage

Hold the handle and aim the blower at the target area to clear debris.



SAFETY NOTICE


- Do not use in wet or damp conditions.
- Keep children away during operation.
- Never insert fingers or objects into the air inlet or outlet.
- Charge or replace the battery when it drops below 10%.
- Disconnect the power before cleaning or maintenance.

MAINTENANCE AND UPKEEP

- **Cleaning:** Use a soft cloth to wipe the machine. Do not use corrosive cleaners.
- **Storage:** Store in a dry, ventilated place, away from heat and fire.



TROUBLESHOOTING

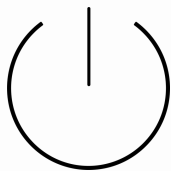

Blower does not start

Check that the battery is installed correctly.



Weak airflow

Check the air inlet for blockages, then clean and retest.



Short battery life

Fully charge the battery before next use.

AFTER SERVICE

If you have questions or problems, contact customer service.

Customer Service Contact

☎ Call: 1-888-413-524

✉ Email: support@woodrangertools.com