




Walla Sound Beat

Wireless Bone-Conduction Headphones



Instruction Manual

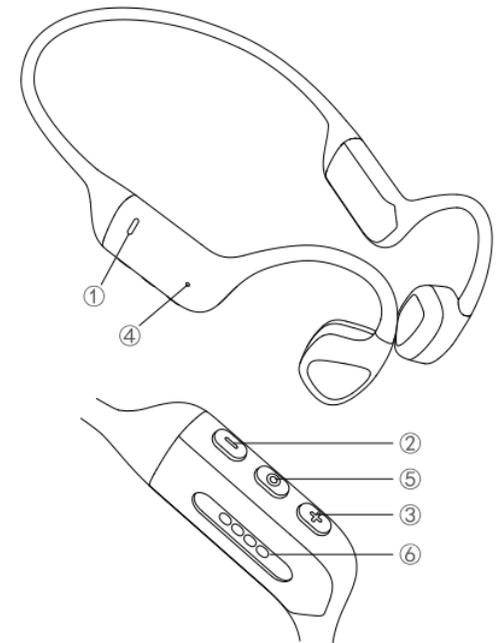

- ① Indicator Light
- ② Volume Down Button (-)
- ③ Volume Up Button (+)
- ④ Microphone
- ⑤ Power Button
- ⑥ Charging Port

Charging the Headphones

These headphones use a built-in rechargeable battery. Before first use, fully charge the headphones. During use, if you hear a "Low battery" voice prompt, the battery level is low and the headphones need to be charged. Connect the charging cable to the magnetic charging port on the headphones. A full charge takes about 2 hours.

Charging indicator lights:

- Red light (solid): Charging
- Blue light (solid): Fully charged

Note:
The magnetic charging connector has positive and negative poles. When aligned correctly, the charger will attach and charge normally. If the connector repels, reverse it and reconnect. Incorrect alignment may prevent charging or cause a short circuit.

Warning:
Dispose of the rechargeable battery properly according to local recycling regulations. Do not throw the battery into fire, as this may cause an explosion.

Operating instruction

Function	Operation	Indicator
On	Press and hold Power button (around 3-5 seconds)	Light on
Off		Light off

Playing Music

Function	Headphone status	Operation
Increase volume	Play music	Click " + "
Reduce volume	Play music	Click " - "
Previous song	Play music	Long press for 1s " - "
Next song	Play music	Long press for 1s " + "
Pause	Play music	Click the Power button
Resume	Pause	

Answer Calls

Function	Headphone status	Operation
Answer or hang up the call	Incoming call	Short press the power button
Decline the call	Incoming call	Long press the Power button for 2 second to hang up
volume control	During call	Click "+ " / "-"
Phone/Bluetooth headset switch	During call	Long press and hold the Power button for 1 second

Playing Music

Pairing with Bluetooth
Make sure the headphones are turned off, then press and hold the power button for two seconds. The indicator light will flash red and blue, indicating that the headphones are in pairing mode. On your phone or computer, turn on Bluetooth and search for the device name "Walla Sound Beat Wireless", then select it to pair and connect. When powered on, the headphones automatically default to Bluetooth mode.

Switching Between Bluetooth and MP3 Mode
Double-click the power/multi-function button to switch freely between Bluetooth and memory (MP3) mode.

Playing Songs from USB (USB/storage name: Walla Beat)
To play songs from a USB device, connect the headphones to your computer using the original charging/data cable. The headphones will appear as a USB storage device, allowing you to copy music files from your computer to the headphones' storage. When playing audio from a TF card, triple-click the power button to switch between shuffle and sequential playback. The headphones will remember your last playback mode.

Automatic Reconnection and Range
After turning on, the headphones will automatically try to connect to the last paired device. If the device moves more than 10 meters (approximately 33 feet) away, the connection will be lost. To reconnect, bring the device back within 10 meters (33 feet), or press the multi-function button on the headphones if they remain disconnected for a long time.

AI Voice Control

Function	Headphone Status	Operation
Voice control	Bluetooth is connected	Long press for "Power" 1s to release

Note:
When the headphones are connected via Bluetooth, press and hold the On/Off button for 1 second and release it. After you hear the prompt, you can use voice commands to control your phone, making it faster and easier to operate. For example, you can ask the headphones to:

- "What time is it?"
- "What's today's weather?"
- "Navigate to Taipei 101"
- "Call [contact name]"

Indicator Lights


Charging	Red light (always on)
Charging completed	Blue light (always on)
Search for pairing	Flash in red and blue alternately
Bluetooth music playback	Blue light flashes once every 5 sec.

Product Parameters

- * Charging time: About 2 hours
- * Distance: Bluetooth 10 meters (33 feet)
- * Battery: 170mAh
- * Play: ≈5 hours@60% volume
- * Agreement: AVRCP_V1.6.2/HFP_V1.7.2/A2DP_V1.2 Bluetooth communication protocol
- * Music format support: MP3, WAV, WMA, APE, FLAC, M4A
- * Version: 6.0
- * Input: 5V/130mA

How to Use the Strap

To attach the strap, wrap the end of the strap around the headphone arch and secure it at the end, ensuring a firm and secure fit.

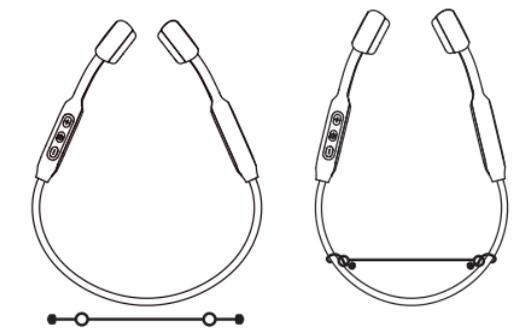

Care and Cleaning

- Do not soak the headphones in seawater or salt water. After exposure to water, rinse with fresh water and dry thoroughly. The magnetic charging area is prone to corrosion, so make sure it is kept clean and dry.
- If the headphones are not used for a long time, charge them fully at least once a month to maintain battery health. Do not disassemble any part of the headphones. If you notice any defects, stop using the product immediately and contact the seller or after-sales service.
- After each use, especially after workouts, wipe the headphones to remove sweat or water. Pay special attention to the magnetic charging area to prevent corrosion, which can affect the lifespan of the product.
- Keep the headphones away from fire, heat, freezing temperatures, chemicals, strong impacts, or pressure. Do not attempt to disassemble or forcibly bend the product.
- Use only a charging adapter with an output of 5V 1A or less to ensure safe charging.

You can email our support team at support@wallasound.com or call us at +1 856 386 6959.

Distributed by
WALLA SOUND®
Albuquerque NM, United States

